



MasterConsole CAT® User Station

Quick Installation and Setup Guide

Congratulations on your purchase of the MasterConsole CAT (MCCAT) user station, MCCAT-UST, a flexible device for connecting a set of keyboard, mouse and monitor to the "two-user" MCCAT switch (MCCAT28 or MCCAT216). This Quick Setup Guide explains how to install the product. Follow the instructions carefully to ensure a quick and easy installation. For more detailed information on the product, consult the User Guide accessible from the Raritan website "Firmware and Documentation" Support page. For instructions, see **Downloading the User Guide** (on page 2).

Package Contents

The package for the MCCAT user station contains:


- MCCAT user station x 1
- Power adapter x 1
- Quick Installation and Setup Guide x 1
- Warranty card x 1

If anything is missing or damaged, contact the local dealer or Raritan technical support for help.

Connecting the Two-User MCCAT Switch


You can connect the MCCAT user station to the "two-user" MCCAT switch to increase the number of users who can access the MCCAT switch and computers.

1. Connect the PS/2 or USB keyboard and mouse to the user station.
 - a. Plug the mouse's connector into the PS/2 or USB port of the user station.
 - b. Plug the keyboard's connector into the PS/2 or USB port of the user station.

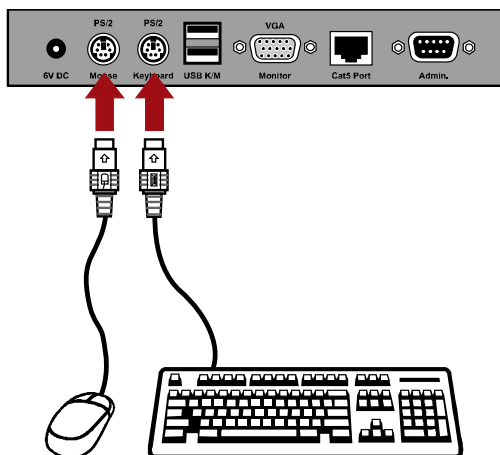


Note: Do NOT connect both of PS/2 and USB keyboards or both of PS/2 and USB mice simultaneously. If you do so, only the USB input devices work properly.

2. Connect the VGA monitor to the user station.

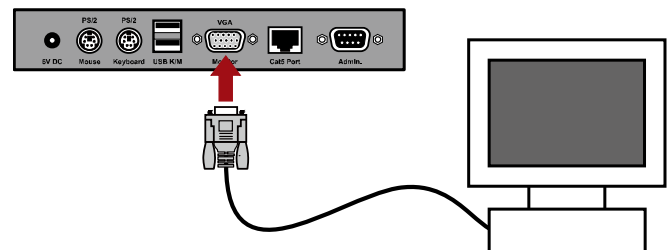

3. Connect the user station to the two-user MCCAT switch via a standard Cat5 UTP cable.
 - a. Plug one end of the Cat5 cable into the **Cat5 Port** of the user station.
 - b. Plug the other end of the cable into the **User 2** port of the MCCAT switch.

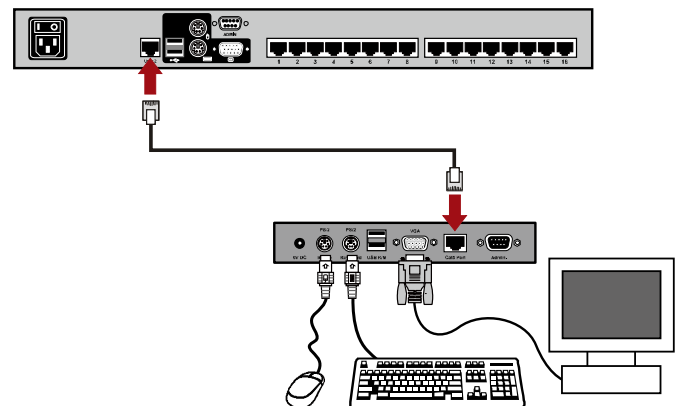

4. Connect the power adapter to the user station.
 - a. Plug one end of the power adapter into the power jack of the user station.



- b. Plug the other end of the power adapter into the appropriate power outlet.
5. Turn on the connected monitor.

After finishing the installation of the MCCAT system and turning on all devices, you can use the input/output devices (keyboard, mouse, and monitor) connected with the user station to control computers connected to the MCCAT switch.

Downloading the User Guide

The MCCAT User Guide, which provides more information regarding the product features and operation, is downloadable from the Raritan website.

► To download the English user guide

1. Link to the **Raritan website** (<http://www.raritan.com>) with your browser.
2. Click Support > Firmware and Documentation > MasterConsole CAT.
3. Click the User Guide on the right pane.
4. Click the latest version to download if the webpage lists multiple user guides.
5. Follow the onscreen instructions until the download completes.

► To download the non-English user guide

Raritan offers several translated user guides for users whose tongue language is NOT English.

1. Link to the **Raritan website** (<http://www.raritan.com>) with your browser.
2. Choose the desired language from the drop-down list of the Choose Country field. Now you are directed to the regional Raritan website.
3. Locate the MasterConsole CAT user guide on the website and click it to start the download process.